



TO LOAD STAPLES

1. Push follow block mechanism.
2. Pull follow block mechanism up slightly.
3. Remove follow block and insert staples.
4. Replace follow block mechanism.
5. To adjust staple depth, slide depth gauge to desired position.
6. Remove the plastic cushion from metal base and rotate the anvil for different staple length.
Position: (1) For 6-15mm (2) For 17-24mm

